



Chevy Silverado/GMC Sierra Installation Instructions





Tools required for installation:

- Impact driver or ratchet wrench
- 18mm socket
- 7/16" or 11mm socket
- Needle-nose pliers
- Wire cutters


Included hardware and accessories:

- (4 ct.) 1/4"-20 Nyloc nuts
- (2 ct.) Keys

Step 1: Lift rear seats on both passenger and driver's side, and remove the driver side seat mounting bolt (Fig. 1) as well as the seatbelt bracket bolt (Fig. 2) with the 18mm socket.




Step 2: Cut the retaining washer on the seatbelt bracket with the wire cutters and twist it off with the needle-nose pliers (Fig. 3). Note the locating pin next to the bolt hole (Fig. 4).

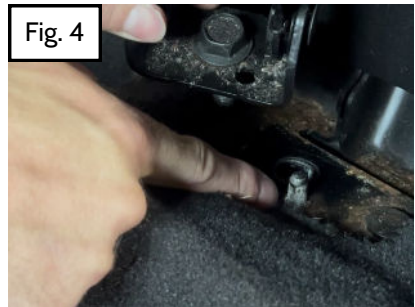



Step 3: Place mounting brackets over locker studs and use the 7/16" socket to install the nuts but don't tighten them; leave enough room for the brackets to be adjusted (Figs. 5&6).

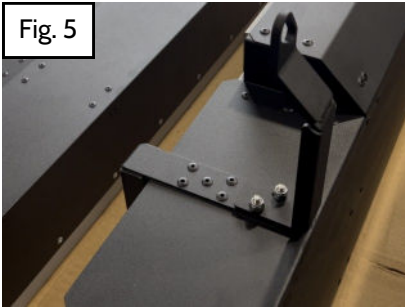

Step 4: Set the locker in the truck and move the seatbelt bracket into place over the locating pin (Fig. 7). Align the driver side bracket with the bolt hole (Fig. 8).





Step 5: Place the seatbelt bracket UNDER the locker mounting bracket first, then reinstall the bolt (Fig. 9). Reinstall the bolt on the driver side bracket (Fig. 10).



Fig. 9

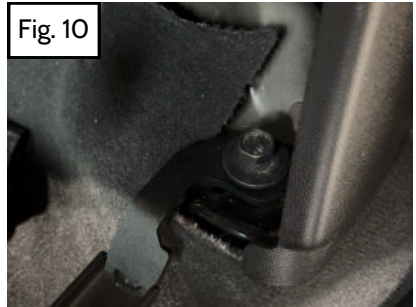


Fig. 10

Step 6: Shift the locker into your desired position, and finish tightening the drivers side Nyloc nuts (Fig. 11). Then move to the seatbelt bracket and tighten the final two nuts (Fig. 12).



Fig. 11

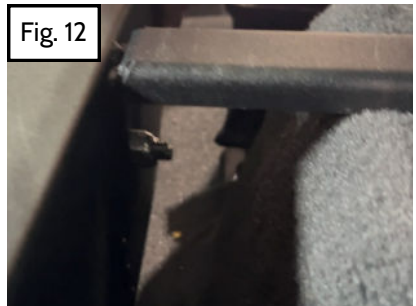


Fig. 12

Step 7: Ensure that the locker does not interfere with the seats (Fig. 13) or when opening and closing (Fig. 14). If it interferes, adjust angle or height as needed.

