

Chevy Silverado/GMC Sierra Underseat Locker Installation Instructions

Tools Required for Installation:

- Impact driver or ratchet wrench
- 18mm socket
- 7/16" or 11mm socket

Included Hardware and Accessories:

- (4 ct.) 1/4"-20 Nyloc nuts
- (2 ct.) Keys

Install Video:



Step 1: Lift rear seats on both passenger and driver's side, and remove the driver side seat mounting bolt (Fig. 1) as well as the passenger side bolt (Fig. 2) with the 18mm socket.

Step 2: **Two people required:** Lift the locker into the truck and set it down on the floor of the cab underneath the rear seats (Fig. 3).



Step 3: Place mounting brackets over locker studs, right-hooked bracket on the driver side and left-hooked bracket on the passenger side, and loosely install the nylock nuts with the 7/16" socket (Figs. 4 & 5).

Step 4: Move the locker further back and into place where the brackets rest above the holes for the bolts removed in Step 1 (Figs. 6 & 7).




Step 5: Place the seat bracket bolts back into place and tighten them a few turns with your hand (Figs. 8 & 9). Adjust the locker so the brackets are straight and align with the locker.



Step 6: Tighten down the two seat bracket bolts with the 18mm socket (Figs 10 & 11).



Step 7: Finishing tightening down the nylock nuts on the driver side bracket (Fig. 12) and the passenger side bracket with the 7/16" socket (Fig. 13).

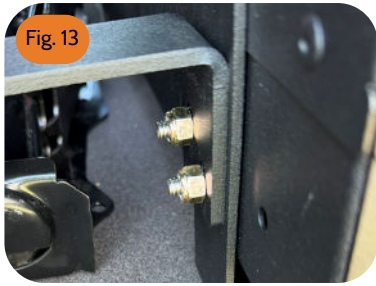

Step 8: Ensure that the locker does not interfere with the seats (Fig. 14) or when opening and closing (Fig. 15). If it interferes, adjust angle or height as needed.



Thank you for choosing GearLok! Your satisfaction is our top priority. We'd love to hear about your experience. Scan the QR code to share an honest review. For any questions or concerns, reach us at support@gearlok.com.



For more information visit



gearlok.com