

Chevy Silverado/GMC Sierra Underseat Locker Installation Instructions

Tools Required for Installation:

- Impact driver or ratchet wrench
- 18mm socket
- 7/16" or 11mm socket

Included Hardware and Accessories:


- (4 ct.) 1/4"-20 Nyloc nuts
- (2 ct.) Keys

Install Video:






Step 1: Lift rear seats on both the passenger and driver sides. Remove the driver side seat mounting bolt (Fig. 1) as well as the seatbelt bracket bolt (Fig. 2) with the 18mm socket.

Step 2: Lift the seatbelt bracket, remove the retaining washer (Fig. 3), and discard the washer. Replace the seatbelt bracket on the locating pin (Fig. 4).

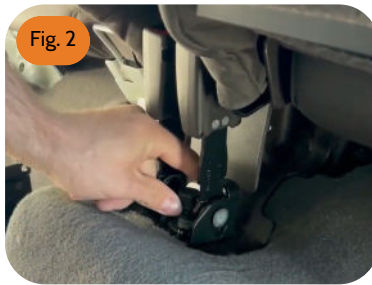


Step 3: Place mounting brackets over locker studs. Use the 7/16" socket to partially tighten the nuts. Leave enough room for the brackets to be adjusted (Figs. 5 & 6).



Step 4: Set the locker in the truck. Align the driver side bracket with the bolt hole (Fig. 7). Place the passenger side bracket over the seatbelt bracket and the locating pin (Fig. 8).

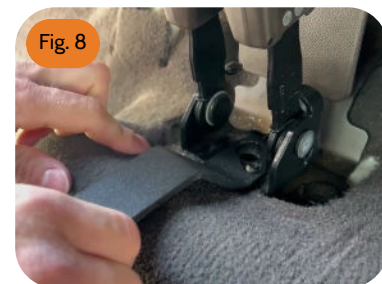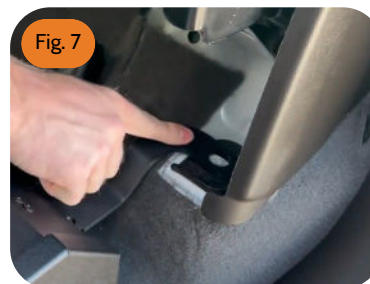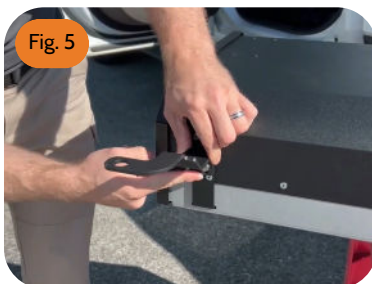

Step 5: Reinstall the bolt on the passenger side bracket (Fig. 9). Reinstall the bolt on the driver side bracket (Fig. 10).

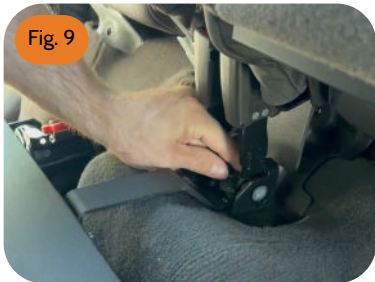

Step 6: Shift the locker into desired position. Finish tightening the driver side Nyloc nuts (Fig. 11). Move to the seatbelt bracket and tighten the final two nuts (Fig. 12).

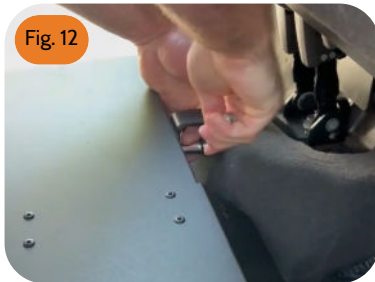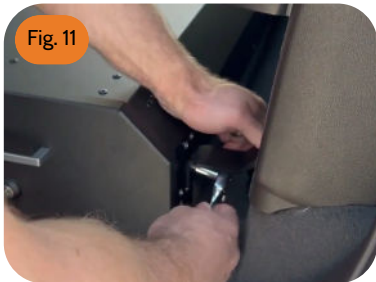

Step 7: Ensure that the locker does not interfere with the seats (Fig. 13) or when opening and closing (Fig. 14). If it interferes, adjust angle or height as needed.



Thank you for choosing GearLok! Your satisfaction is our top priority. We'd love to hear about your experience. Scan the QR code to share an honest review. For any questions or concerns, reach us at support@gearlok.com.



For more information visit



gearlok.com